



PARTS CATALOGUE

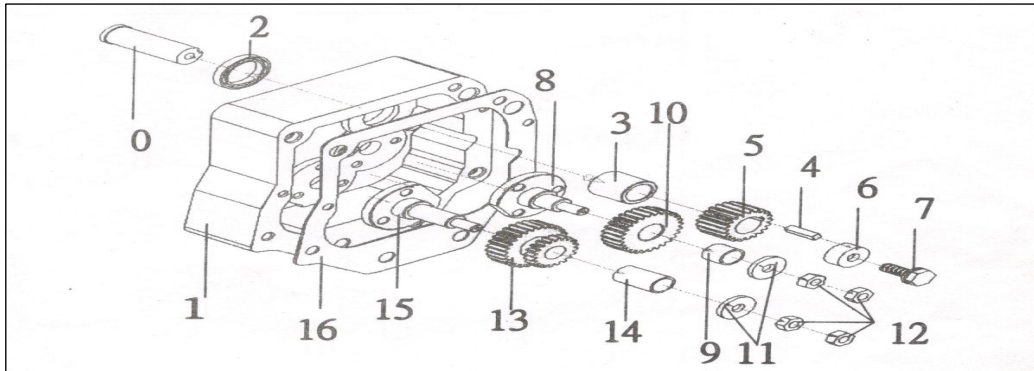 


 
 
**Shrachi SPR 1200
Power Reaper**

Service Helpline - 9163220000 | shrachiagrimech.com

Parts Catalog

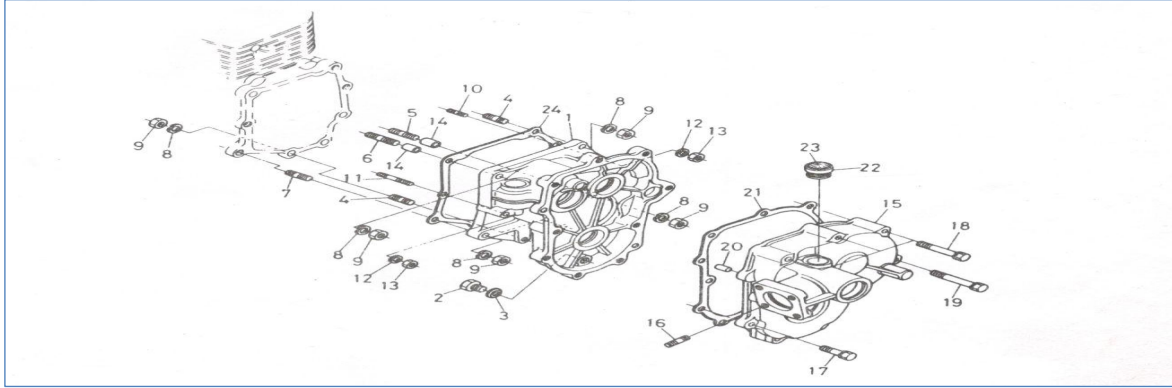 
GEAR BOX (Fig. 0)



 
 
Sl.No.	PART IMAGE	DESCRIPTION	TARO CODE	ERP CODE	GRP	QTY PER MACHINE
1		GEAR BOX	TR12001-0001	SPRPTRBD000010	SP	1
2		SEAL, OIL	TR12001-0002	SPRPTRBD000020	SP	1
3		COLLAR, 18-THRUST	TR12001-0003	SPRPTRBD000030	SP	1
4		KEY	TR12001-0004	SPRPTRBD000040	SP	1
5		GEAR, 21T	TR12001-0005	SPRPTRBD000050	SP	1
6		CAP	TR12001-0006	SPRPTRBD000060	SP	1
7		BOLT	TR12001-0007	SPRPTRBD000070	SP	1
8		1ST SHAFT	TR12001-0008	SPRPTRBD000080	SP	1
9		1ST COPPER BUSH	TR12001-0009	SPRPTRBD000090	SP	1
10		GEAR, 1ST SHAFT	TR12001-0010	SPRPTRBD000100	SP	1
11		WASHER, PLAIN	TR12001-0011	SPRPTRBD000110	SP	2

12		NUT	TR12001-0012	SPRPTRBD000120	SP	4
13		GEAR, 2ND SHAFT	TR12001-0013	SPRPTRBD000130	SP	1
14		COPPER BUSH, 2ND SHAFT	TR12001-0014	SPRPTRBD000140	SP	1
15		2ND SHAFT	TR12001-0015	SPRPTRBD000150	SP	1
16		PACKING, GEAR BOX	TR12001-0016	SPRPTRBD000160	SP	1

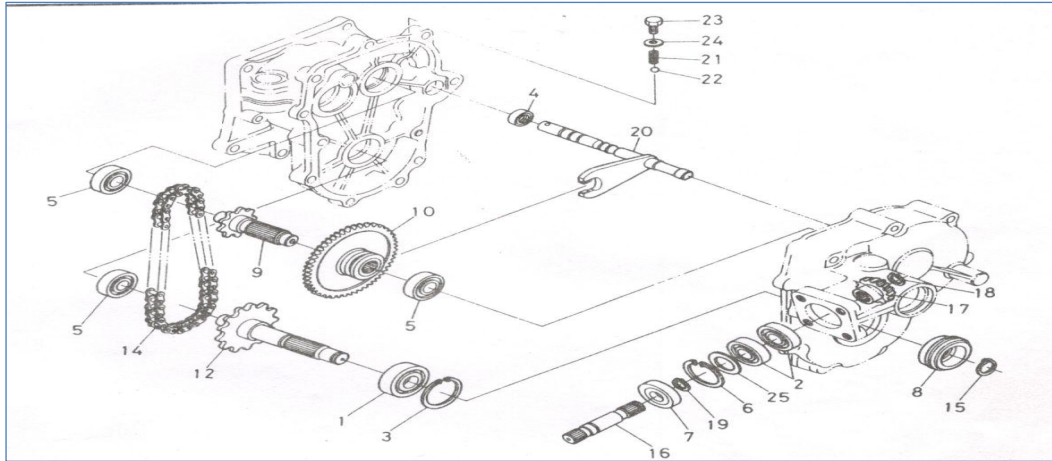 
TRANSMISSION CASE (Fig. 1)



 
 
SL. NO.	PART IMAGE	DESCRIPTION	TARO CODE	ERP CODE	GRP	QTY PER MACHINE
1		CASE, TRANSMISSION	TR48000-1111-0	SPRPTRBD010010	SP	1
2		PLUG	TR06331-35012	SPRPTRBD010020	SP	1
3		WASHER, SEAL	TR04717-01200	SPRPTRBD010030	SP	1
4		STUD	TR01518-50825	SPRPTRBD010040	SP	3
5		STUD	TR01513-50835	SPRPTRBD010050	SP	1
6		STUD	TR01513-50840	SPRPTRBD010060	SP	1
7		STUD	TR01518-50828	SPRPTRBD010070	SP	1
8		WASHER, SPRING	TR04512-50080	SPRPTRBD010080	SP	6
9		NUT	TR02114-50080	SPRPTRBD010090	SP	6
10		STUD	TR01518-50620	SPRPTRBD010100	SP	1

11		STUD	TR01518-50640	SPRPTRBD010110	SP	1
12		WASHER, SPRING	TR04512-50060	SPRPTRBD010120	SP	2
13		NUT	TR02014-50060	SPRPTRBD010130	SP	2
14		KNOCK, PIPE	TR41051-1459-0	SPRPTRBD010140	SP	2
15		CASE, TRANSMISSION 2	TR50770-1112-0	SPRPTRBD010150	SP	1
16		STUD	TR01518-50814	SPRPTRBD010160	SP	4
17		BOLT	TR01120-50832	SPRPTRBD010170	SP	5
18		BOLT	TR01120-50855	SPRPTRBD010180	SP	3
19		BOLT	TR01120-50860	SPRPTRBD010190	SP	1
20		PIN, STRAIGHT	TR05012-00814	SPRPTRBD010200	SP	2
21		GASKET, T-CASE	TR50770-1142-0	SPRPTRBD010210	SP	1
22		PLUG, OIL FILLER	TR50070-1161-0	SPRPTRBD010220	SP	1
23		LABEL, OIL FILLER	TR50070-1165-0	SPRPTRBD010230	SP	1
24		PACKING, GEAR BOX	TR12001-0016	SPRPTRBD010240	SP	1

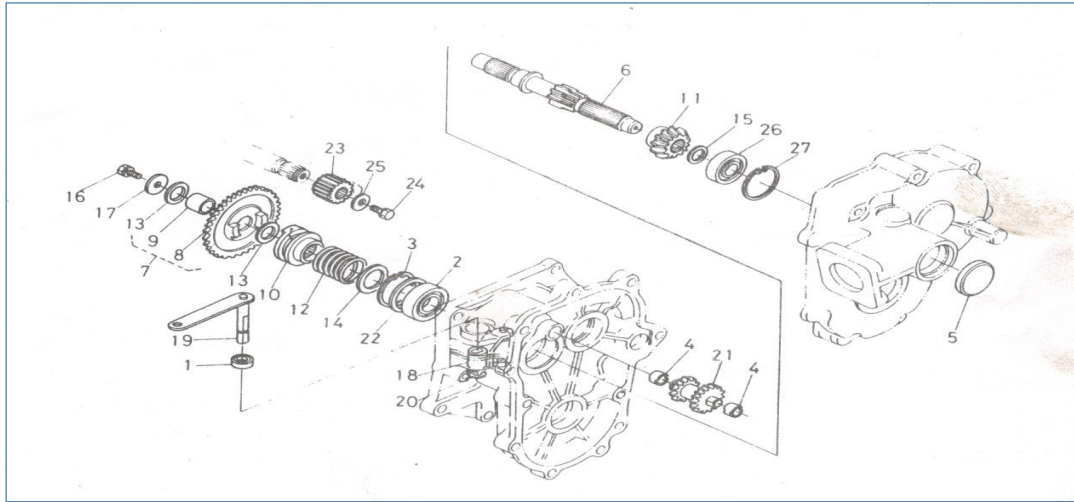 
TRANSMISSION SYSTEM - 1(Fig. 2)



 
SI. NO.	PART IMAGE	DESCRIPTION	TARO CODE	ERP CODE	GRP	QTY PER MACHINE
1		BEARING, BALL	TR08101-06004	SPRPTRBD020010	SP	1
2		BEARING, BALL	TR08101-06202	SPRPTRBD020020	SP	2
3		CIR-CLIP, INTERNAL	TR04611-00420	SPRPTRBD020030	SP	1
4		SEAL, OIL	TR09500-12227	SPRPTRBD020040	SP	1
5		BEARING, BALL	TR08101-06202	SPRPTRBD020050	SP	3
6		CIR-CLIP, INTERNAL	TR04611-00350	SPRPTRBD020060	SP	1
7		SEAL, OIL	TR09500-15357	SPRPTRBD020070	SP	1
8		SEAL, SHAFT 3	TR50770-1122-0	SPRPTRBD020080	SP	1

9		SHAFT, 2	TR48000-1221-0	SPRPTRBD020090	SP	1
10		GEAR, 50	TR50770-1222-0	SPRPTRBD020100	SP	1
11				SPRPTRBD020110	SP	
12		SHAFT, 3	TR48000-1231-0	SPRPTRBD020120	SP	1
13				SPRPTRBD020130	SP	
14		CHAIN, 3-SHAFT	TR48000-1233-0	SPRPTRBD020140	SP	1
15		CIR-CLIP, EXTERNAL	TR04621-00170	SPRPTRBD020150	SP	1
16		SHAFT, HARVEST	TR50770-1251-0	SPRPTRBD020160	SP	1
17		GEAR, BEVEL 13	TR49000-1252-0	SPRPTRBD020170	SP	1
18		CIR-CLIP, EXTERNAL	TR04612-00140	SPRPTRBD020180	SP	1
19		CIR-CLIP, EXTERNAL	TR04612-00150	SPRPTRBD020190	SP	1
20		FORK, SHIFT	TR49000-1311-0	SPRPTRBD020200	SP	1
21		SPRING, BALL-STOPPER	TR50620-1315-2	SPRPTRBD020210	SP	1
22		BALL	TR07715-01605	SPRPTRBD020220	SP	1
23		BOLT	TR50620-1317-3	SPRPTRBD020230	SP	1
24		GASKET	TR04711-00100	SPRPTRBD020240	SP	1
25		SHIM(26-35-0.15)	TR48000-1253-0	SPRPTRBD020250	SP	1

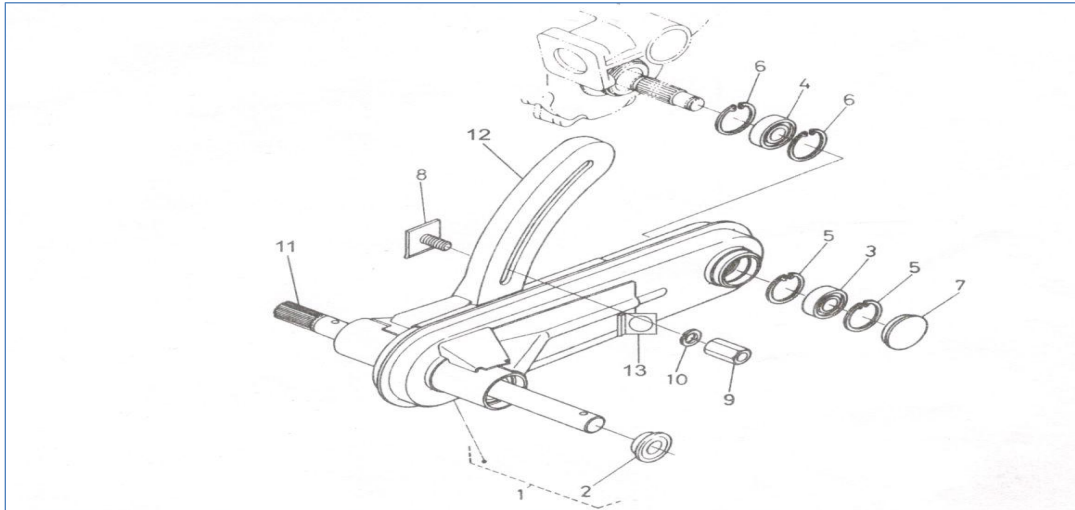 
TRANSMISSION SYSTEM - 2 (Fig. 3)



SL. NO.	PART IMAGE	DESCRIPTION	TARO CODE	ERP CODE	GRP	QTY PER MACHINE
1		SEAL, OIL	TR09500-10207	SPRPTRBD030010	SP	1
2		BEARING, BALL	TR08101-06004	SPRPTRBD030020	SP	1
3		CIR-CLIP, INTERNAL	TR04611-00420	SPRPTRBD030030	SP	1
4		BUSH, 12	TR50770-1121-0	SPRPTRBD030040	SP	2
5		CAP, BLIND	TR50770-1166-2	SPRPTRBD030050	SP	1
6		SHAFT, 1	TR50770-1211-0	SPRPTRBD030060	SP	1
7		ASSY GEAR, SPUR 52	TR50770-1210-0	SPRPTRBD030070	SP	1
8		GEAR, SPUR 52	TR50770-1212-0	SPRPTRBD030080	SP	1
9		BUSH 17	TR50770-1213-0	SPRPTRBD030090	SP	1
10		CLUTCH, DOG	TR50770-1214-2	SPRPTRBD030100	SP	1
11		GEAR, BEVEL 15	TR49000-1215-0	SPRPTRBD030110	SP	1

12		SPRING, MAIN CLUTCH	TR50770-1216-0	SPRPTRBD030120	SP	1
13		COLLAR, 17-THRUST	TR50770-1217-0	SPRPTRBD030130	SP	2
14		COLLAR, 20-THRUST	TR50770-1218-0	SPRPTRBD030140	SP	1
15		COLLAR, 15-THRUST	TR50557-1223-0	SPRPTRBD030150	SP	1
16		BOLT	TR01023-50612	SPRPTRBD030160	SP	1
17		WASHER, PLAIN	TR04015-50060	SPRPTRBD030170	SP	1
18		FORK, MAIN CLUTCH	TR50770-1261-0	SPRPTRBD030180	SP	1
19		ARM, MAIN CLUTCH	TR50770-1262-0	SPRPTRBD030190	SP	1
20		CIR-CLIP, INTERNAL	TR04613-50700	SPRPTRBD030200	SP	1
21		SHAFT, BACK	TR50770-1271-0	SPRPTRBD030210	SP	1
23		GEAR, 21T	TR12001-0005	SPRPTRBD030230	SP	1
24		BOLT	TR01023-50612	SPRPTRBD030240	SP	1
25		WASHER, PLAIN	TR50770-1642-2	SPRPTRBD030250	SP	1
26		BEARING, BALL	TR08101-06202	SPRPTRBD030260	SP	1
27		CIR-CLIP, INTERNAL	TR04611-00350	SPRPTRBD030270	SP	1

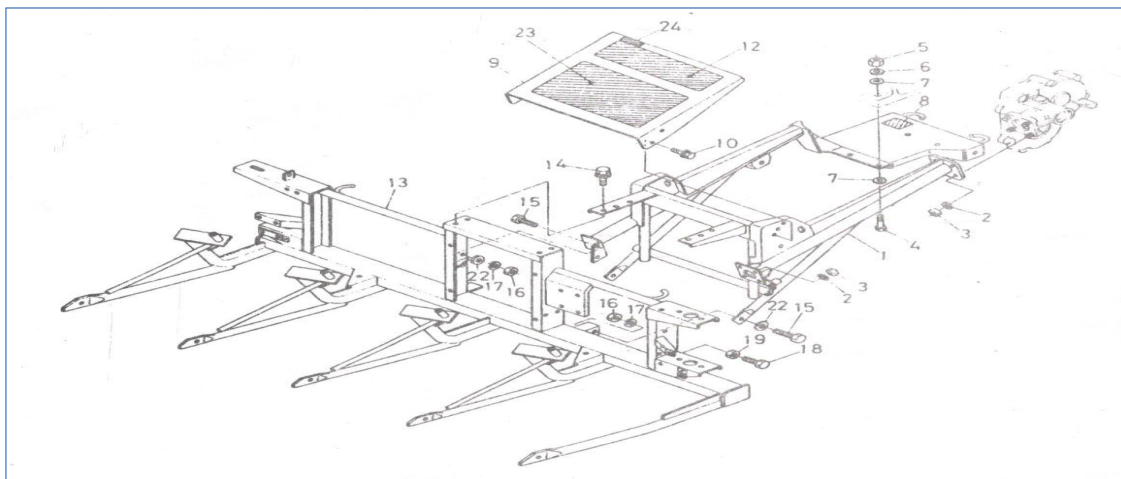 
CHAIN CASE (Fig. 4)

 


 
 
 
SI. NO.	PART IMAGE	DESCRIPTION	TARO CODE	ERP CODE	GRP	QTY PER MACHINE
1		ASSY CASE, CHAIN	TR48000-1280-0	SPRPTRBD040010	SP	1
2		SEAL, OIL	TR34150-1128-0	SPRPTRBD040020	SP	2
3		BEARING, BALL	TR08101-06203	SPRPTRBD040030	SP	1
4		BEARING, BALL	TR08101-06004	SPRPTRBD040040	SP	1
5		CIR-CLIP, INTERNAL	TR04611-00400	SPRPTRBD040050	SP	2
6		CIR-CLIP, INTERNAL	TR04611-00420	SPRPTRBD040060	SP	2
7		CAP, BLIND 40	TR50727-4361-0	SPRPTRBD040070	SP	1
8		BOLT, SUSPENSION	TR49000-1181-2	SPRPTRBD040080	SP	1
9		NUT, SUSPENSION	TR49000-1182-2	SPRPTRBD040090	SP	1

10		WASHER, SPRING	TR04512-50410	SPRPTRBD040100	SP	1
11		AXLE	TR48000-1280-1	SPRPTRBD040110	SP	1
12		CURVE METAL/ SUSPENSION HOLDER	TR48000-1280-5	SPRPTRBD040120	SP	1
13		SUSPENSION SPACER	TR48000-1280-6	SPRPTRBD040130	SP	2

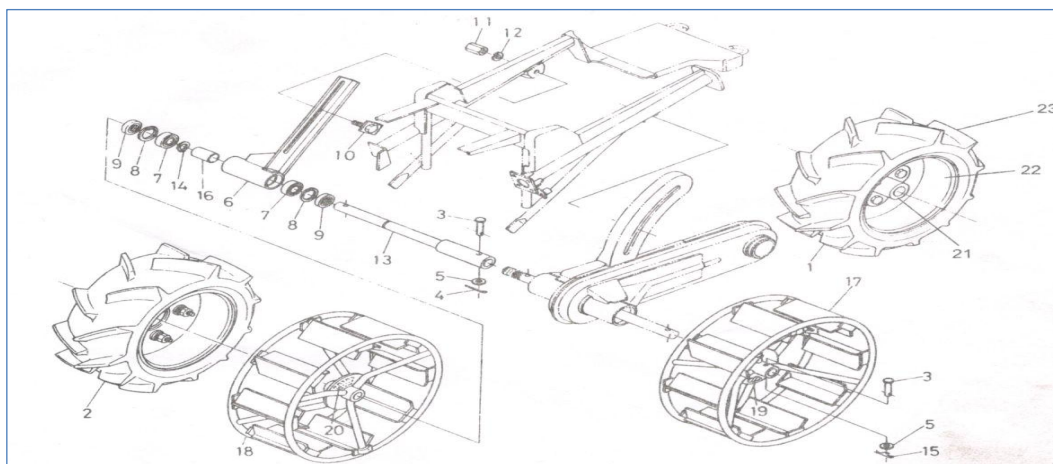 
CARRYING FRAME (Fig. 5)



SI. NO.	PART IMAGE	DESCRIPTION	TARO CODE	ERP CODE	GRP	QTY PER MACHINE
1		FRAME, REAR	TR48000-2111-5	SPRPTRBD050010	SP	1
2		WASHER, SPRING	TR04512-50080	SPRPTRBD050020	SP	8
3		NUT	TR02114-50080	SPRPTRBD050030	SP	8
4		BOLT	TR01150-50835	SPRPTRBD050040	SP	4
5		NUT	TR02114-50080	SPRPTRBD050050	SP	4
6		WASHER, SPRING	TR04512-50080	SPRPTRBD050060	SP	4

7		WASHER, PLAIN	TR04013-50080	SPRPTRBD050070	SP	8
9		COVER FRAME	TR49000-2113-0	SPRPTRBD050090	SP	1
10		BOLT	TR01021-50616	SPRPTRBD050100	SP	4
11		TARO(LABEL)TARO	TR76611-4769-4	SPRPTRBD050120	SP	1
12		FRAME, CARRYING	TR48000-2121-3	SPRPTRBD050130	SP	1
13		BOLT	TR01121-50820	SPRPTRBD050140	SP	4
14		BOLT	TR01150-50818	SPRPTRBD050150	SP	4
15		NUT	TR02114-50080	SPRPTRBD050160	SP	4
16		WASHER, SPRING	TR04512-50080	SPRPTRBD050170	SP	4
17		BOLT	TR01152-50830	SPRPTRBD050180	SP	1
18		NUT	TR02112-50080	SPRPTRBD050190	SP	1
19		WASHER, PLAIN	TR04013-50080	SPRPTRBD050220	SP	4
20		LABEL	TR48000-2115-2	SPRPTRBD050230	SP	1

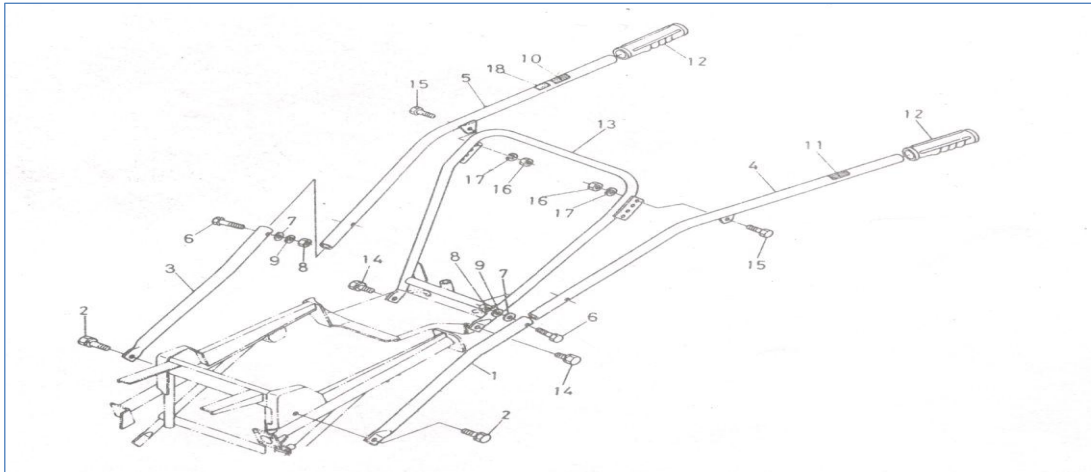 
WHEEL (Fig. 6)

 


SI. NO.	PART IMAGE	DESCRIPTION	TARO CODE	ERP CODE	GRP	QTY PER MACHINE
1		ASSY TIRE, LH	TR48000-2402-2	SPRPTRBD060010	SP	1
2		ASSY TIRE, RH	TR48000-2403-2	SPRPTRBD060020	SP	1
3		PIN, AXLE	TR48000-2451-0	SPRPTRBD060030	SP	3
4		PIN, SPLIT	TR05511-50215	SPRPTRBD060040	SP	1
5		WASHER, PLAIN	TR04012-50080	SPRPTRBD060050	SP	3
6		SUPPORT, WHEEL	TR49000-2381-2	SPRPTRBD060060	SP	1
7		BEARING, BALL	TR08141-06005	SPRPTRBD060070	SP	2
8		CIR-CLIP, INTERNAL	TR04611-00470	SPRPTRBD060080	SP	2
9		SEAL, OIL	TR34150-1128-0	SPRPTRBD060090	SP	2
10		BOLT, SUSPENSION	TR49000-1181-2	SPRPTRBD060100	SP	1

11		NUT, SUSPENSION	TR49000-1182-2	SPRPTRBD060110	SP	1
12		WASHER, SPRING	TR04512-50140	SPRPTRBD060120	SP	1
13		AXLE, EXTENSION	TR48000-2384-2	SPRPTRBD060130	SP	1
14		CIR-CLIP, INTERNAL	TR04612-00250	SPRPTRBD060140	SP	1
15		PIN, SNAP	TR05516-50800	SPRPTRBD060150	SP	2
16		COLLAR	TR48000-2385-2	SPRPTRBD060160	SP	1
17		CAGE WHEEL, LH	TR48010-2331-0	SPRPTRBD060170	SP	1
18		CAGE WHEEL, RH	TR48010-2332-0	SPRPTRBD060180	SP	1
21		HUB PLATE	TR48000-2404-3	SPRPTRBD060210	SP	2
22		WHEEL HIB	TR48000-2404-4	SPRPTRBD060220	SP	2
23		TIRE ONLY	TR48000-2404-5	SPRPTRBD060230	SP	2

HANDLE - 1 (Fig. 7)

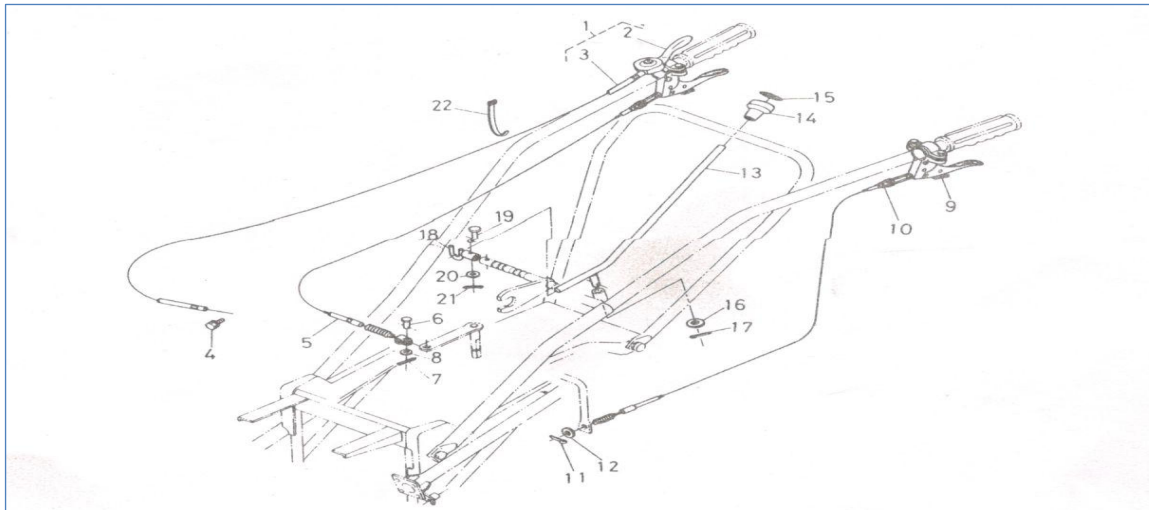 


SL. NO.	PART IMAGE	DESCRIPTION	TARO CODE	ERP CODE	GRP	QTY PER MACHINE
1		HANDLE 1	TR49000-3111-0	SPRPTRBD070010	SP	1
2		BOLT	TR01133-51225	SPRPTRBD070020	SP	2
3		HANDLE 2	TR49000-3111-1	SPRPTRBD070030	SP	1
4		HANDLE 2 LH	TR49000-3113-0	SPRPTRBD070040	SP	1
5		HANDLE 2 RH	TR49000-3114-0	SPRPTRBD070050	SP	1
6		BOLT	TR01150-50845	SPRPTRBD070060	SP	2
7		WASHER, PLAIN	TR04013-50080	SPRPTRBD070070	SP	2
8		NUT	TR02114-50080	SPRPTRBD070080	SP	2
9		WASHER, SPRING	TR04512-50080	SPRPTRBD070090	SP	2
10		LABEL, MAIN CLUTCH	TR49000-3124-0	SPRPTRBD070100	SP	1



11		LABEL, HARVEST CLUTCH	TR49000-3125-0	SPRPTRBD070110	SP	1
12		GRIP, HANDLE	TR61011-4113-0	SPRPTRBD070120	SP	2
13		STAY, HANDLE	TR48000-3141-2	SPRPTRBD070130	SP	1
14		BOLT	TR01130-51020	SPRPTRBD070140	SP	2
15		BOLT	TR01150-50820	SPRPTRBD070150	SP	2
16		NUT	TR02114-50080	SPRPTRBD070160	SP	2
17		WASHER, SPRING	TR04512-50080	SPRPTRBD070170	SP	2
18		LABEL, CLUTCH LEVER	TR49000-1695-0	SPRPTRBD070180	SP	1

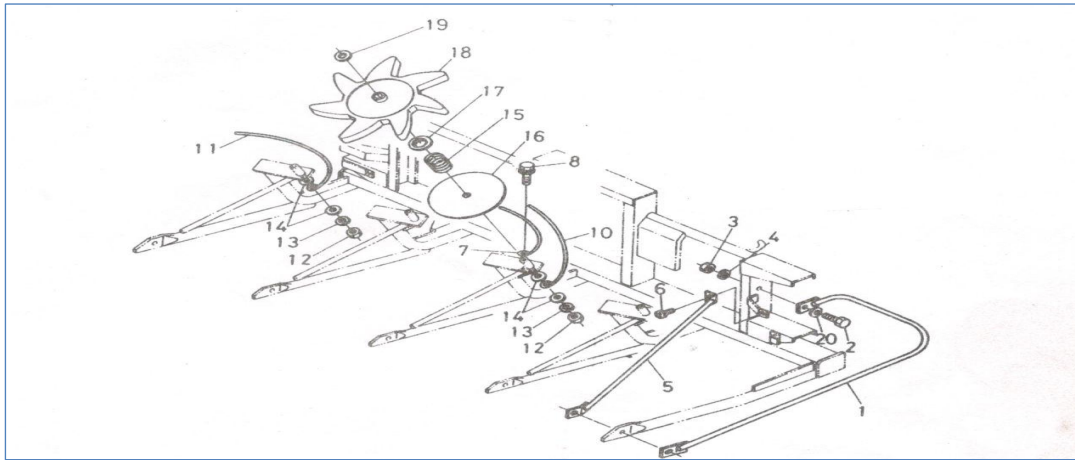 
HANDLE - 2 (Fig. 8)



SI. NO.	PART IMAGE	DESCRIPTION	TARO CODE	ERP CODE	GRP	QTY PER MACHINE
1		ASSY LEVER, MAIN CLUTCH	TR49000-3210-0	SPRPTRBD080010	SP	1
2		LEVER, MAIN CLUTCH	TR50770-3241-0	SPRPTRBD080020	SP	1
3		WIRE, THROTTLE	TR49000-3212-0	SPRPTRBD080030	SP	1
4		BOLT	TR01222-50612	SPRPTRBD080040	SP	1
5		WIRE, MAIN CLUTCH	TR49000-3213-0	SPRPTRBD080050	SP	1
6		PIN, JOINT	TR05122-50616	SPRPTRBD080060	SP	1
7		PIN, SPLIT	TR055111-51612	SPRPTRBD080070	SP	1
8		WASHER, PLAIN	TR04013-50060	SPRPTRBD080080	SP	1
9		LEVER, HARVEST CLUTCH	TR49000-3231-0	SPRPTRBD080090	SP	1
10		WIRE, HARVEST CLUTCH	TR49000-3235-0	SPRPTRBD080100	SP	1
11		PIN, SPLIT	TR05511-50212	SPRPTRBD080110	SP	1

 
 
--

DIVIDER GUIDE (Fig. 9)

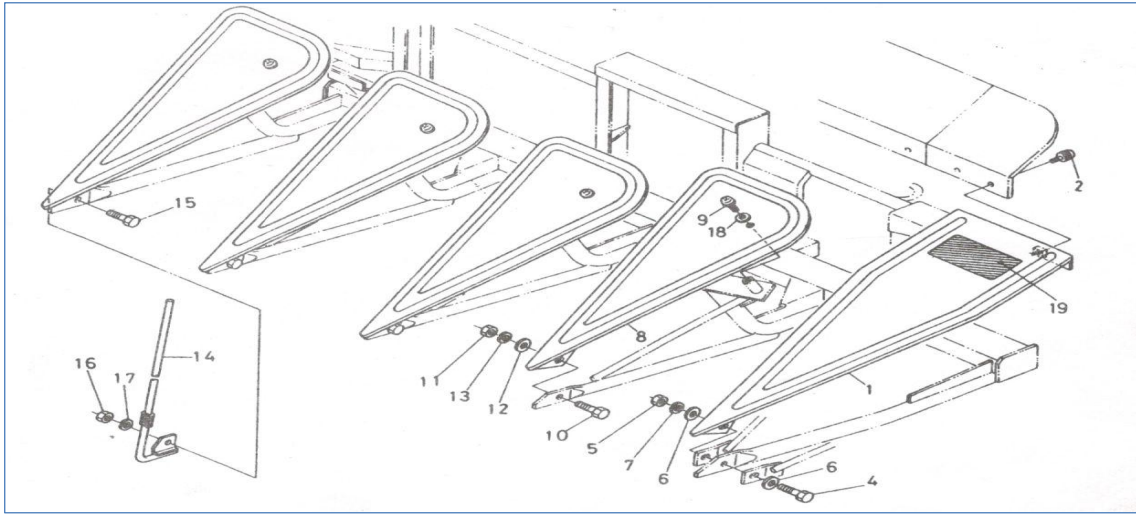 


SL. NO.	PART IMAGE	DESCRIPTION	TARO CODE	ERP CODE	GRP	QTY PER MACHINE
1		GUIDE, DIVIDER LH	TR49000-5131-2	SPRPTRBD090010	SP	1
2		BOLT	TR01150-50820	SPRPTRBD090020	SP	1
3		NUT	TR02114-50080	SPRPTRBD090030	SP	1
4		WASHER, SPRING	TR04512-50080	SPRPTRBD090040	SP	1
5		GUIDE, DIVIDER RH	TR48000-5133-0	SPRPTRBD090050	SP	1
6		SCREW, WITH WASHER	TR03004-50614	SPRPTRBD090060	SP	1
7		ROD, LOWER GUIDE	TR49000-5141-0	SPRPTRBD090070	SP	3
8		BOLT	TR01121-50820	SPRPTRBD090080	SP	3
9		ROD, UPPER GUIDE	TR49000-5142-0	SPRPTRBD090100	SP	3
10		ROD, GUIDE RH	TR49000-5143-0	SPRPTRBD090110	SP	1
12		NUT	TR02114-50080	SPRPTRBD090120	SP	4

 


13		WASHER, SPRING	TR04512-50080	SPRPTRBD090130	SP	4
14		WASHER, PLAIN	TR04013-50080	SPRPTRBD090140	SP	8
15		SPRING, REVOLVING	TR50706-5144-0	SPRPTRBD090150	SP	4
16		PLATE, REVOLVING STAR WHEEL	TR49000-5145-0	SPRPTRBD090160	SP	4
17		CAP	TR50541-3218-0	SPRPTRBD090170	SP	4
18		STAR WHEEL, REVOLVING	TR49000-5147-0	SPRPTRBD090180	SP	4
19		COLLAR	TR50541-3221-2	SPRPTRBD090190	SP	4
20		WASHER, PLAIN	TR04013-50080	SPRPTRBD090200	SP	1

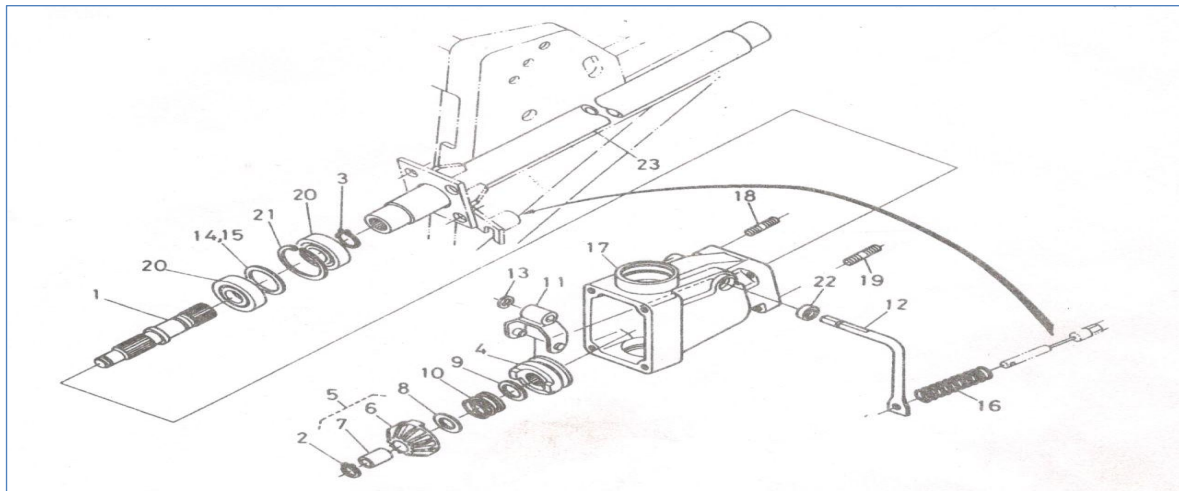 
BONNET (Fig. 10)

 
 


 
 
SL. NO.	PART IMAGE	DESCRIPTION	TARO CODE	ERP CODE	GRP	QTY PER MACHINE
1		BONNET LH	TR48000-5171-0	SPRPTRBD100010	SP	1
2		SCREW, WITH WASHER	TR03034-50616	SPRPTRBD100020	SP	2
3						
4		BOLT	TR01150-50825	SPRPTRBD100040	SP	1
5		NUT	TR02114-50080	SPRPTRBD100050	SP	1
6		WASHER, PLAIN	TR04013-50080	SPRPTRBD100060	SP	2
7		WASHER, SPRING	TR04512-50080	SPRPTRBD100070	SP	1
8		BONNET	TR48000-5173-2	SPRPTRBD100080	SP	4
9		SCREW, WITH WASHER	TR03004-50816	SPRPTRBD100090	SP	4
10		BOLT	TR01150-50818	SPRPTRBD100100	SP	3

11		NUT	TR02114-50080	SPRPTRBD100110	SP	3
12		WASHER, PLAIN	TR04013-50080	SPRPTRBD100120	SP	3
13		WASHER, SPRING	TR04512-50080	SPRPTRBD100130	SP	3
14		MARKER	TR48000-5175-0	SPRPTRBD100140	SP	1
15		BOLT	TR01150-50820	SPRPTRBD100150	SP	1
16		NUT	TR02114-50080	SPRPTRBD100160	SP	1
17		WASHER, SPRING	TR04512-50080	SPRPTRBD100170	SP	1
18		WASHER, PLAIN	TR04015-50080	SPRPTRBD100180	SP	4
19		LABEL	TR48000-5172-0	SPRPTRBD100190	SP	1

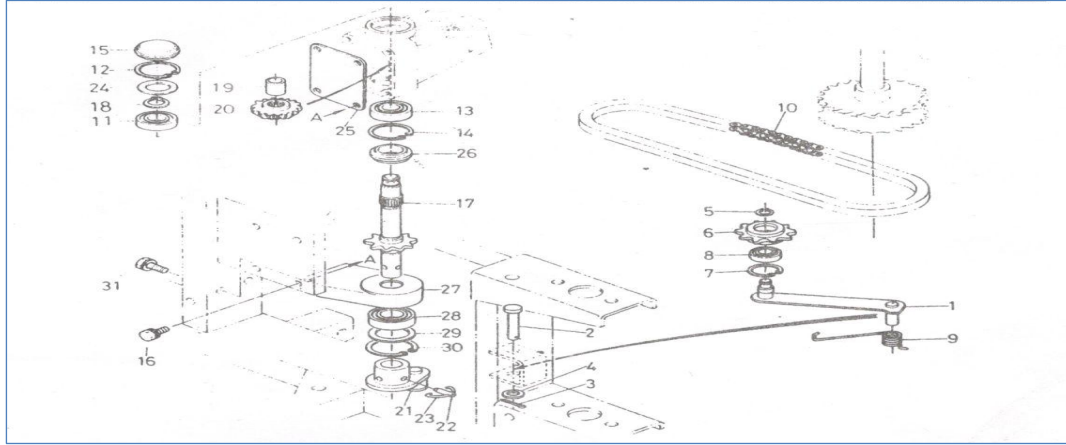 
HARVEST CLUTCH (Fig. 11)

 


 
SI. NO.	PART IMAGE	DESCRIPTION	TARO CODE	ERP CODE	GRP	QTY PER MACHINE
1		SHAFT, DRIVE	TR50770-5471-0	SPRPTRBD110010	SP	1
2		CIR-CLIP, EXTERNAL	TR04612-00120	SPRPTRBD110020	SP	1
3		CIR-CLIP, EXTERNAL	TR04612-00150	SPRPTRBD110030	SP	1
4		DOG CLUTCH, HARVEST	TR50770-5472-0	SPRPTRBD110040	SP	1
5		ASSY GEAR, BEVEL 13	TR50770-5470-0	SPRPTRBD110050	SP	1
6		GEAR, BEVEL 13	TR50770-5473-0	SPRPTRBD110060	SP	1
7		BUSH 18-BEVEL	TR50557-1273-0	SPRPTRBD110070	SP	1
8		COLLAR, THRUST 12	TR50770-5475-0	SPRPTRBD110080	SP	1
9		COLLAR, THRUST 15	TR50770-5476-0	SPRPTRBD110090	SP	1
10		SPRING	TR50770-5477-0	SPRPTRBD110100	SP	1
11		FORK, HARVEST CLUTCH	TR50770-5478-0	SPRPTRBD110110	SP	1

12		ARM, HARVEST CLUTCH	TR49000-5479-0	SPRPTRBD110120	SP	1
13		CIR-CLIP, EXTERNAL	TR04613-50060	SPRPTRBD110130	SP	1
16		SPRING	TR50771-5481-0	SPRPTRBD110160	SP	1
17		CASE, BEVEL	TR50770-5511-2	SPRPTRBD110170	SP	1
18		STUD	TR01518-50814	SPRPTRBD110180	SP	3
19		STUD	TR01518-50818	SPRPTRBD110190	SP	1
20		BEARING, BALL	TR08141-06202	SPRPTRBD110200	SP	2
21		CIR-CLIP, INTERNAL	TR04611-00350	SPRPTRBD110210	SP	1
22		SEAL, OIL	TR09230-08144	SPRPTRBD110220	SP	1
23		SHAFT, DRIVE	TR49000-1751-0	SPRPTRBD110230	SP	1

CARRYING DRIVE CHAIN (Fig. 12)

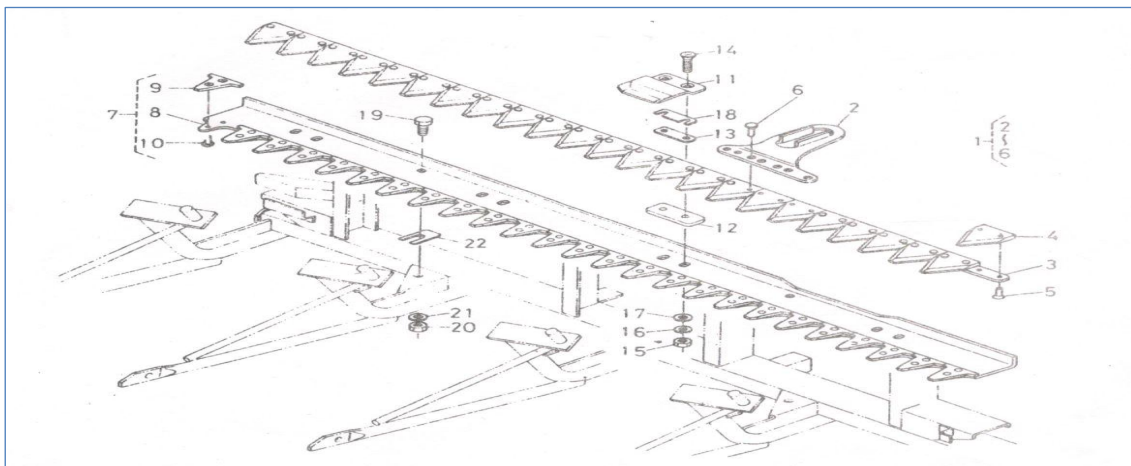 


SI. NO.	PART IMAGE	DESCRIPTION	TARO CODE	ERP CODE	GRP	QTY PER MACHINE
1		ARM, CARRYING DRIVE	TR48000-5492-0	SPRPTRBD120010	SP	1
2		PIN, JOINT	TR05122-50850	SPRPTRBD120020	SP	1
3		PIN, SPLIT	TR05511-50215	SPRPTRBD120030	SP	1
4		WASHER, PLAIN	TR04013-50080	SPRPTRBD120040	SP	1
5		CIR-CLIP, EXTERNAL	TR04612-00100	SPRPTRBD120050	SP	1
6		SPROCKET	TR50400-5224-3	SPRPTRBD120060	SP	1
7		CIR-CLIP, INTERNAL	TR04611-00260	SPRPTRBD120070	SP	1
8		BEARING, BALL	TR08141-06000	SPRPTRBD120080	SP	1
9		SPRING, TENSION	TR49000-5494-0	SPRPTRBD120090	SP	1
10		CHAIN, CARRYING DRIVE	TR48000-5496-0	SPRPTRBD120100	SP	1

11		BEARING BALL	TR08141-06001	SPRPTRBD120110	SP	1
12		CIRCLIP INTERNAL	TR04611-00280	SPRPTRBD120120	SP	1
13		BEARING, BALL	TR08141-06002	SPRPTRBD120130	SP	1
14		CIR-CLIP,internal	TR04611-00320	SPRPTRBD120140	SP	1
15		COVER, DUST	TR50730-6236-0	SPRPTRBD120150	SP	1
16		BOLT	TR01023-50612	SPRPTRBD120160	SP	4
17		SHAFT, CUTTING BLADE	TR48000-5521-2	SPRPTRBD120170	SP	1
18		CIR-CLIP, EXTERNAL	TR04612-00120	SPRPTRBD120180	SP	1
19		COLLAR	TR50770-5522-0	SPRPTRBD120190	SP	1
20		GEAR, BEVEL-15	TR50770-5524-0	SPRPTRBD120200	SP	1
21		CRANK, CUTTING BLADE	TR48000-5526-2	SPRPTRBD120210	SP	1
22		PIN, SAFETY	TR49000-5527-0	SPRPTRBD120220	SP	1
23		STOPPER	TR50770-5528-2	SPRPTRBD120230	SP	1
24		SHIM	TR41020-5114-0	SPRPTRBD120240	SP	1
25		GASKET, BEVEL CASE	TR49000-5514-0	SPRPTRBD120250	SP	1
26		COLLAR	TR50770-5525-0	SPRPTRBD120260	SP	1
27		SUPPORT, SHAFT	TR48000-5518-0	SPRPTRBD120270	SP	1
28		BEARING, BALL	TR08141-06202	SPRPTRBD120280	SP	1

30		CIR-CLIP internal	TR04611-00350	SPRPTRBD120300	SP	1
31		BOLT	TR01120-50820	SPRPTRBD120310	SP	1

BLADE (Fig. 13)

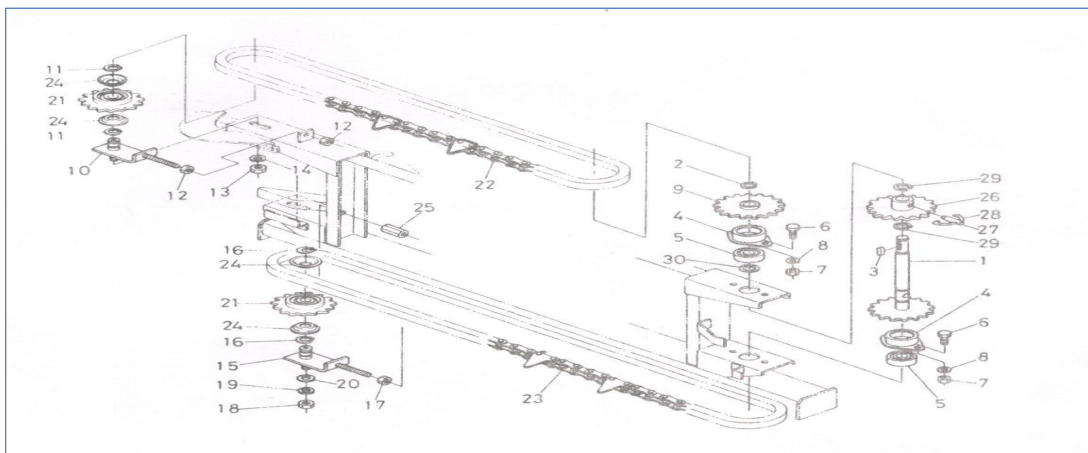 


 
SI. NO.	PART IMAGE	DESCRIPTION	TARO CODE	ERP CODE	GRP	QTY PER MACHINE
		ASSY CUTTER	TR48000-5530-4	SPRPTRBD130000	SP	1
1		ASSY CUTTING BLADE	TR48000-5540-3	SPRPTRBD130010	SP	1
2		HEAD, KNIFE	TR48000-5541-0	NOT SOLD LOOSE		
3		BAR, KNIFE	TR49000-5542-0	NOT SOLD LOOSE		
4		CUTTING, BLADE	TR50431-4113-2	SPRPTRBD130040	SP	24
5		RIVET	TR50680-5545-0	SPRPTRBD130050	SP	41
6		RIVET	TR50680-5545-0	SPRPTRBD130060	SP	7

7		ASSY RECEIVE BLADE	TR48000-5560-0	SPRPTRBD130070	SP	1
8		BASE. RECEIVE BLADE	TR48000-5561-0	NOT SOLD LOOSE		
9		RECEIVE BLADE	TR50400-4221-5	SPRPTRBD130090	SP	24
10		RIVET	TR05611-10412	SPRPTRBD130100	SP	50
11		CLIP, KNIFE	TR48000-5581-0	NOT SOLD LOOSE		
12		PLATE	TR50880-5583-0	NOT SOLD LOOSE		
13		PLATE, KNIFE CLIP	TR50706-5584-0	NOT SOLD LOOSE		
14		SCREW, CSK-HD	TR03016-50830	NOT SOLD LOOSE		
15		NUT	TR02114-50080	NOT SOLD LOOSE		
16		WASHER, SPRING	TR04512-50080	NOT SOLD LOOSE		
17		WASHER, PLAIN	TR04013-50080	NOT SOLD LOOSE		

18		SHIM	TR50530-4219-2	NOT SOLD LOOSE		
19		BOLT	TR01153-50818	NOT SOLD LOOSE		
20		NUT	TR02114-50080	NOT SOLD LOOSE		
21		WASHER, SPRING	TR04512-50080	NOT SOLD LOOSE		
22		SHIM	TR56713-6155-0	NOT SOLD LOOSE		

CARRYING CHAIN (Fig. 14)

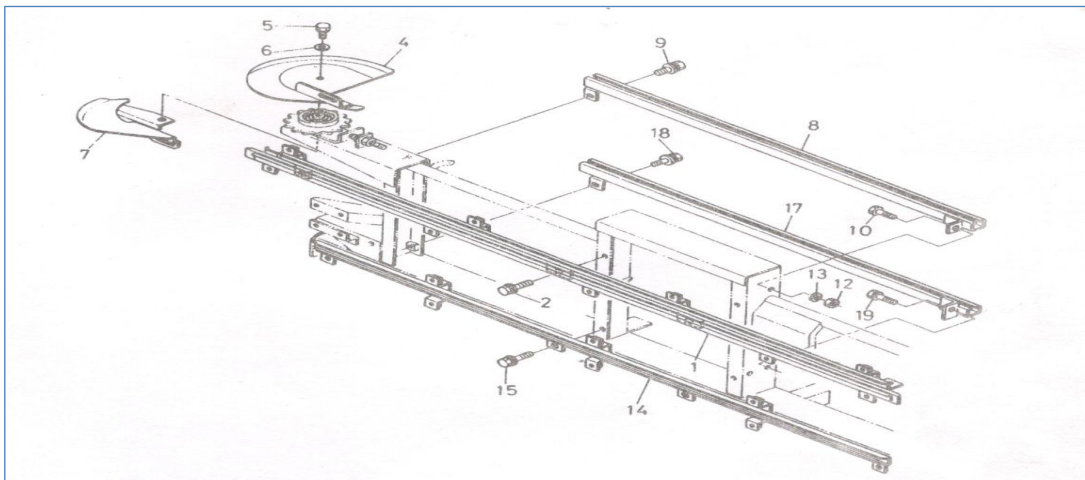 


SL. NO.	PART IMAGE	DESCRIPTION	TARO CODE	ERP CODE	GRP	QTY PER MACHINE
1		SHAFT, CARRYING DRIVE	TR48000-5611-2	SPRPTRBD140010	SP	1
2		CIR-CLIP, EXTERNAL	TR04612-00150	SPRPTRBD140020	SP	1
3		KEY, FEATHER	TR05712-00520	SPRPTRBD140030	SP	1
4		CASE, BEARING	TR53143-2216-0	SPRPTRBD140040	SP	2
5		BEARING, BALL	TR08141-06202	SPRPTRBD140050	SP	2

6		BOLT	TR01053-50612	SPRPTRBD140060	SP	4
7		NUT	TR02014-50060	SPRPTRBD140070	SP	4
8		WASHER, SPRING	TR04512-50060	SPRPTRBD140080	SP	4
9		SCPROCKET, CARRYING DRIVE 20	TR48000-5621-0	SPRPTRBD140090	SP	1
10		SHAFT TIGHTENER UPPER	TR48000-5631-0	SPRPTRBD140100	SP	1
11		CIR-CLIP, EXTERNAL	TR04612-00150	SPRPTRBD140110	SP	2
12		NUT	TR02114-50080	SPRPTRBD140120	SP	2
13		NUT	TR02118-50100	SPRPTRBD140130	SP	1
14		WASHER, SPRING	TR04512-50100	SPRPTRBD140140	SP	1
15		SHAFT TIGHTENER LOWER	TR48000-5632-0	SPRPTRBD140150	SP	1
16		CIR-CLIP, EXTERNAL	TR04612-00150	SPRPTRBD140160	SP	2
17		NUT	TR02114-50080	SPRPTRBD140170	SP	1
18		NUT	TR02118-50100	SPRPTRBD140180	SP	1
19		WASHER, SPRING	TR04512-50100	SPRPTRBD140190	SP	1
20		WASHER, PLAIN	TR04013-50100	SPRPTRBD140200	SP	1
21		SPROCKET 19	TR49000-5633-0	SPRPTRBD140210	SP	2
22		CHAIN CARRYING UPPER	TR48000-5661-0	SPRPTRBD140220	SP	1

23		CHAIN CARRYING LOWER	TR48000-5662-0	SPRPTRBD140230	SP	1
24		NUT	TR41041-6114-0	SPRPTRBD140250	SP	1
25		20(SPROCKET, CARRYING DRIVE 20)	TR48000-5612-0	SPRPTRBD140260	SP	1
26		PIN, SAFETY	TR49000-5527-0	SPRPTRBD140270	SP	1
27		STOPPER	TR50770-5528-2	SPRPTRBD140280	SP	1
28		COLLAR, THRUST	TR50770-5476-0	SPRPTRBD140300	SP	1

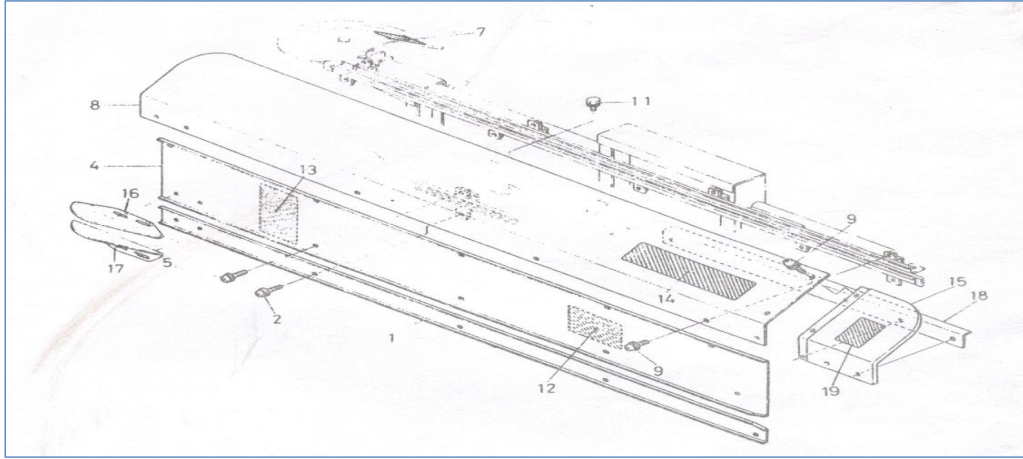 
CARRYING RAIL (Fig. 15)

 


SL. NO.	PART IMAGE	DESCRIPTION	TARO CODE	ERP CODE	GRP	QTY PER MACHINE
1		RAIL, CARRYING CHAIN UPPER	TR49000-5671-0	SPRPTRBD150010	SP	1
2		BOLT	TR01121-50820	SPRPTRBD150020	SP	4
3		PLATE, UPPER	TR48000-5672-0	SPRPTRBD150040	SP	1
4		BOLT	TR01120-50814	SPRPTRBD150050	SP	1

--

CARRYING DECK (Fig. 16)



SL. NO.	PART IMAGE	DESCRIPTION	TARO CODE	ERP CODE	GRP	QTY PER MACHINE
1		DECK, CARRYING LOWER	TR49000-5681-0	SPRPTRBD160010	SP	1
2		SCREW, WITH WASHER	TR03034-50616	SPRPTRBD160020	SP	6
4		DECK, CARRYING MIDDLE	TR49000-5683-0	SPRPTRBD160040	SP	1
5		SCREW, WITH WASHER(SAME AS SPRPTRBD160020)	TR03034-50616	SPRPTRBD160020	SP	10
7		LABEL, OILING	TR49000-5684-0	SPRPTRBD160070	SP	1
8		DECK, CARRYING UPPER	TR49000-5685-2	SPRPTRBD160080	SP	1
9		SCREW, WITH WASHER(SAME AS SPRPTRBD160020)	TR03034-50616	SPRPTRBD160020	SP	6
11		BOLT	TR01120-50820	SPRPTRBD160110	SP	2
12		LABEL, SAFETY PIN	TR49000-5686-0	SPRPTRBD160120	SP	1
13		LABEL, CHAIN TENSION	TR49000-5687-0	SPRPTRBD160130	SP	1

14		MARK, FORM	TR49000-5688-0	SPRPTRBD160140	SP	1
15		DECK, CARRYING LH	TR49000-5689-0	SPRPTRBD160150	SP	1
16		PLATE, GUIDE UPPER	TR49000-5676-0	SPRPTRBD160160	SP	1
17		PLATE, GUIDE LOWER	TR49000-5677-0	SPRPTRBD160170	SP	1
18		DECK, SUPPORT	TR48000-5691-0	SPRPTRBD160180	SP	1
19		LABEL, SAFETY WORKING	TR49000-1693-0	SPRPTRBD160190	SP	1



BTL EPC LTD

Corporate Office: Shrachi Tower, 686, Anandapur, E.M. Bypass Junction, Kolkata – 700 107

Registered Office: 2, Jessore Road, Kolkata – 700 028 | +91 9007724621

Branch Offices: Cuttack | Guwahati | Patna | Indore | Raipur | Hyderabad | Bengaluru | Faridabad (Delhi)
Trichy (Chennai) | Sangli (Pune) | Durg | Lucknow | Chaibasa (Ranchi)

Service Helpline No.: +91 9163220000 | btlmktg@shrachi.com | www.shrachiagrimech.com